

OilTector[®]


Quick Start 1 Phase Duplex

Liberty Pumps[®]

Use the (Installation Example) diagram **1** on the bottom right of page 1 as a reference to match up each component included in this system to the correct terminal blocks inside the control panel **A** shown in diagram **2**

Follow steps **3** through **11** in order.

See note on bottom of this page for steps **6** & **7**

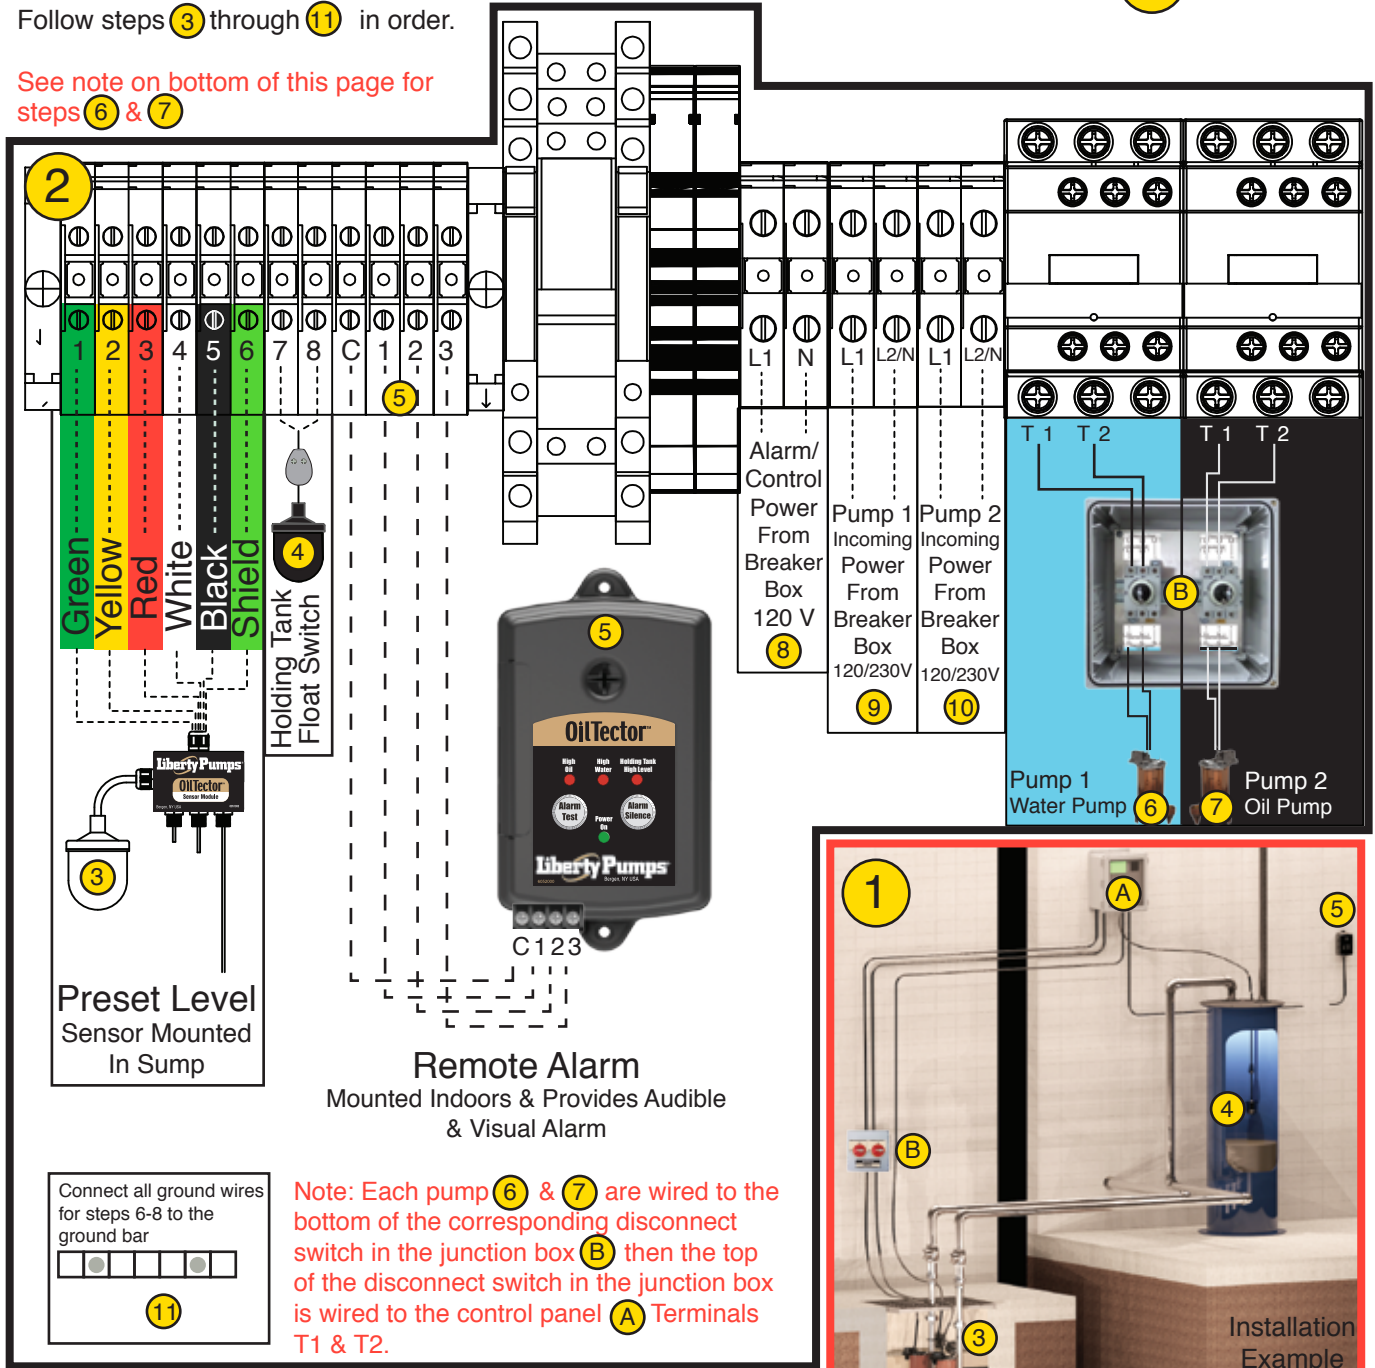

Liberty Pumps[®]

Page 1 of 3

Manual 6965000A
DWG# 6965000A

7000 Apple Tree Avenue, Bergen, NY 14416 Phone: (800) 543-2550-Fax: (585) 494-1839-www.libertypumps.com

(317) 346-4110

DRAINAGE SOLUTIONS, INC

www.drainagesolutionsinc.com


QUICK START

USE PAGE 2 FOR ROUND SHAPED HOLDING TANKS (Follow Steps A-0)


USE PAGE 3 FOR RECTANGLE OR SQUARE SHAPED HOLDING TANKS (Follow Steps A-0)

A. Turn On Power To The Control Panel


B. Press (Configure Oil Tank)

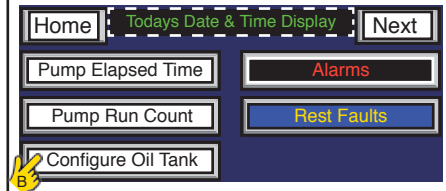


C. Press (Enter Pump GPM)

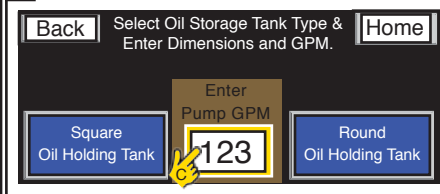


D1. Enter Pump Gallons Per Minute From Pump Nameplate.
D2. Press ENT

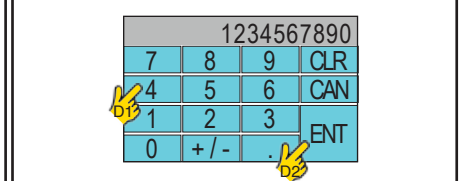


E1. Press (Round Tank)

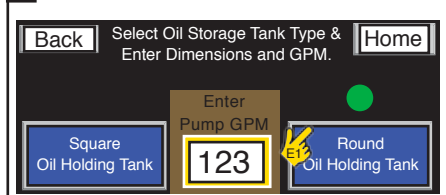


F1. Press (Diameter Inches) Button. **F2.** Enter Oil Tank Diameter. Press ENT. Repeat For Depth.

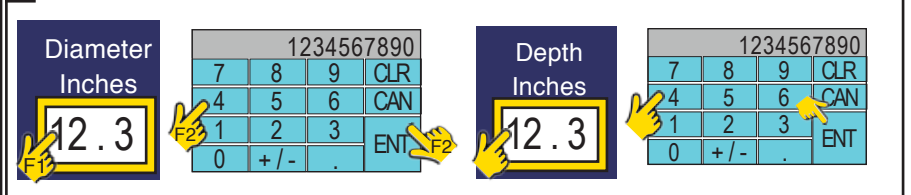


G1. Press (Back) Button On Round Tank Screen

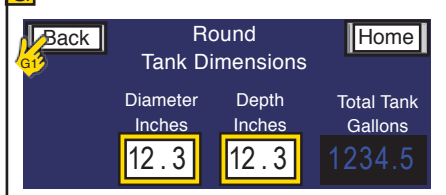


G2. Press (Back) On Select Oil Storage Tank Screen

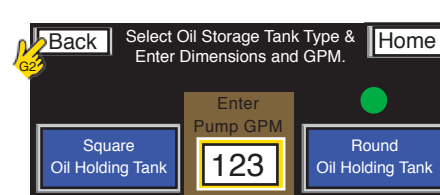

G3. Press (Next) On Today's Date Screen

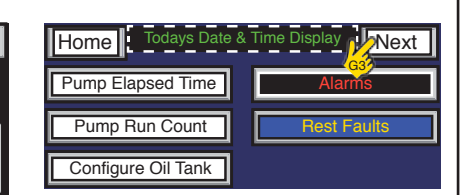


H. Press (Maintenance Menu) Button

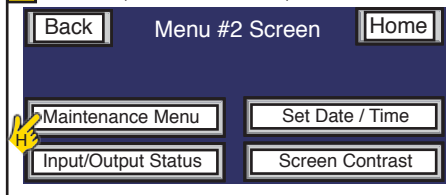


I1. Enter Password (1001) as shown below.


I2. Press Arrow Keys Until 1 Is Highlighted
I3. Press ENT (1st * appears)
I2. Press Arrow Keys Until 0 Is Highlighted
I3. Press ENT (2nd * appears)
I2. Press Arrow Keys Until 0 Is Highlighted
I3. Press ENT (3rd * appears)
I2. Press Arrow Keys Until 1 Is Highlighted
I3. Press ENT (4th * appears)
I2. Press Arrow Keys Until OK Is Highlighted
I3. Press ENT (You Will Be On Screen)

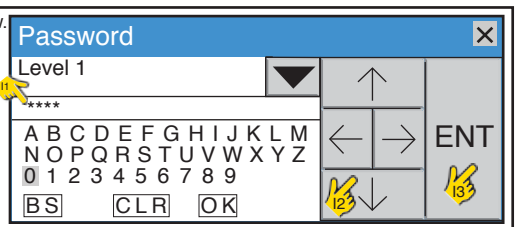


J. Press Pump Hand/Auto To Verify Position Of Switches. Note: Off Delay Is Preset To 10 Seconds

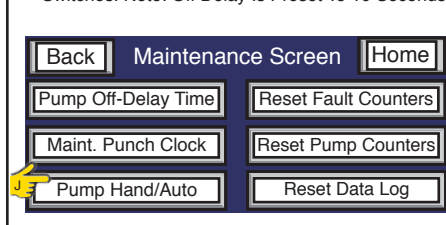

N1. Place All Switches In Auto
N2. Press Home Button

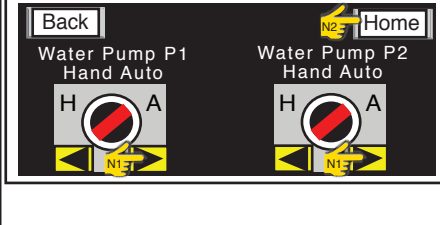

O. Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Main Manual For Bucket Test)

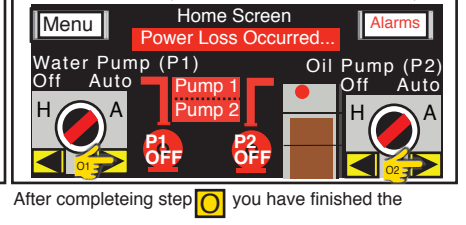


After completing step **O** you have finished the quick start and are on the Home Screen

Back Will Always Take You To The Previous Screen
Home Will Always Take You To The Home Screen


QUICK START - FOLLOW STEPS A-O IF USING A SQUARE OR RECTANGLE TANK

A. Turn On Power To The Control Panel


B. Press (Configure Oil Tank)

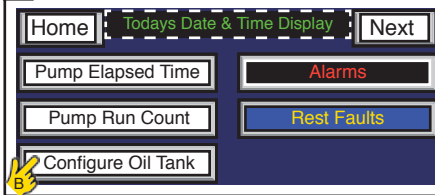


C. Press (Enter Pump GPM)

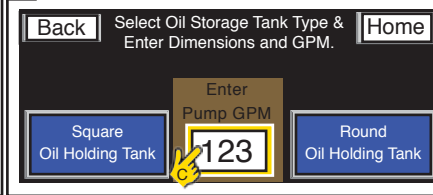


D. D1. Enter Pump Gallons Per Minute From Pump Nameplate. D2. Press ENT

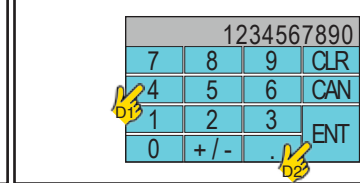


E. E1. Press (Square Tank)

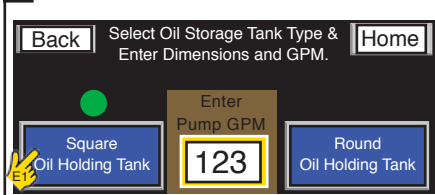


F. F1. Press (Length Inches) Button. F2. Enter Length. Press ENT. Repeat For Width & Depth.

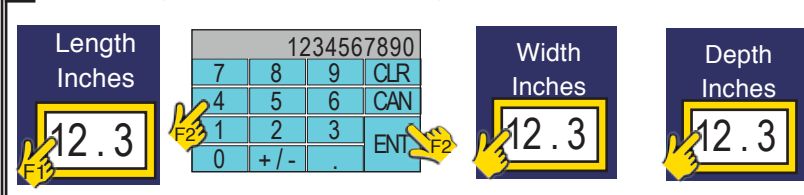


G. G1. Press (Back) Button On Square/Rectangle Screen

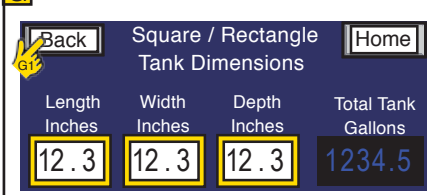


G2. Press (Back) On Select Oil Storage Tank Screen

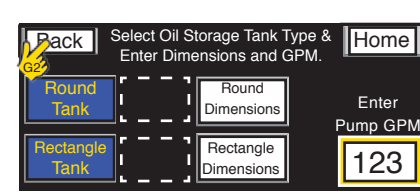


G3. Press (Next) On Today's Date Screen

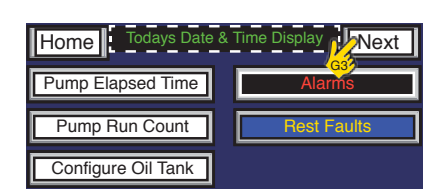


H. Press (Maintenance Menu) Button

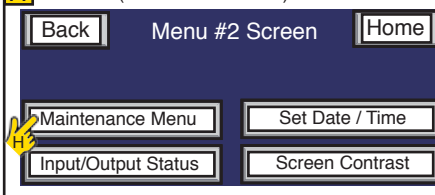


I. I1. Enter Password (1001) as shown below.

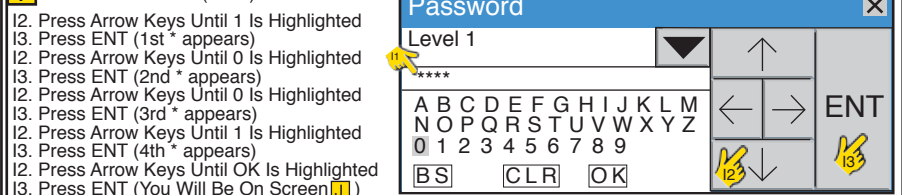


J. Press Pump Hand/Auto To Verify Position Of Switches. Note: Off Delay Is Preset To 10 Seconds

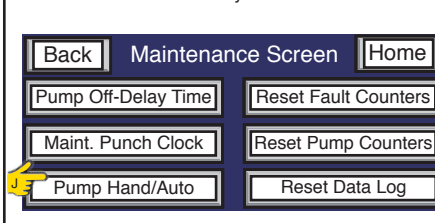

N. N1. Place All Switches In Auto N2. Press Home Button

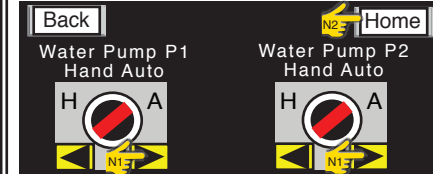

O. Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Main Manual For Bucket Test)

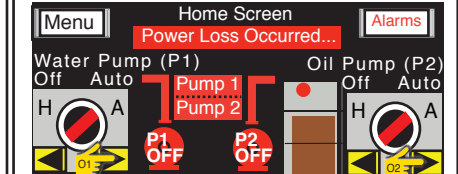

After completing step O you have finished the quick start and are on the Home Screen

- Back Will Always Take You To The Previous Screen
- Home Will Always Take You To The Home Screen