


# S-85 UNIVERSAL PLUG FOR DRAIN SUMPS & DISTRIBUTION BOXES

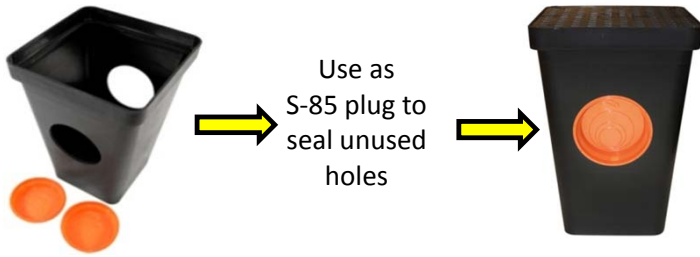


Use as  
S-85 plug to  
seal unused  
holes

**Or** modify the S-85 Seal to  
use as a pipe seal



**1** - Identify the size pipe you wish to attached to your Tuf-Tite D. Sump or D. Box

**2** - Identify the indentation on the S-85 Seal that corresponds with the pipe size

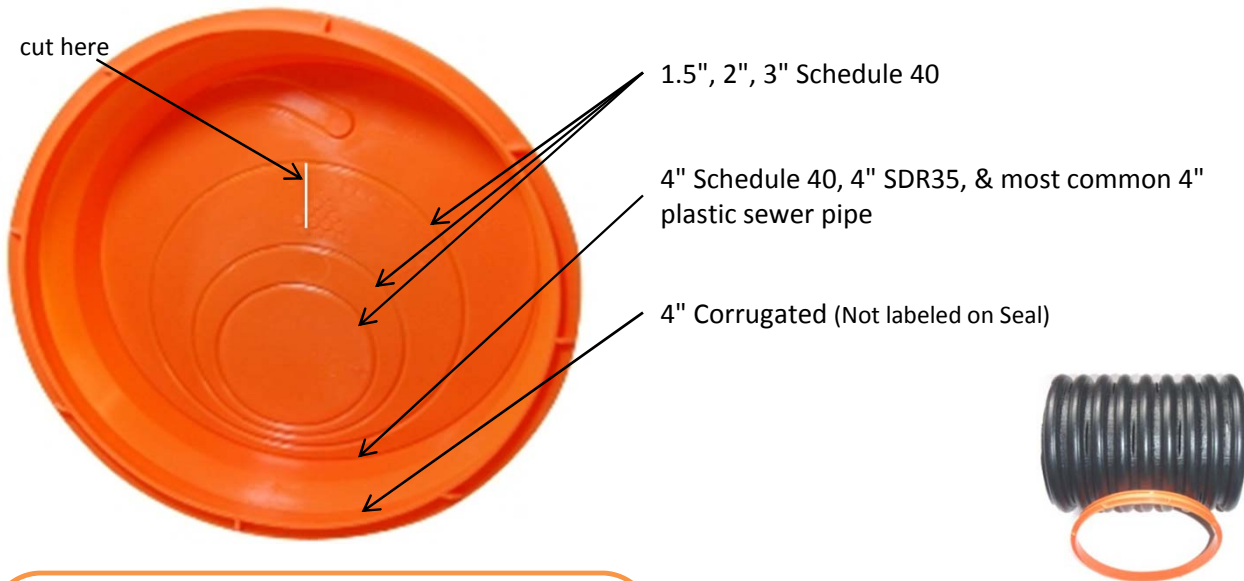

**3** - Prior to installing the seal in the box, choose the appropriate size tear out. Using a utility knife start a small cut perpendicular to the indentation. (See white sample cut line in drawing for 3" hole.)

**4** - Then with your fingers tear the material along the indentation until you completely remove the circle of material

**5** - Insert the modified seal to the Sump or D. Box along the recessed area on the outer ring of the seal. **DO NOT ATTACH THE SEAL TO THE PIPE FIRST**

**6** - Insert the pipe into the seal



(317) 346-4110

[www.drainagesolutionsinc.com](http://www.drainagesolutionsinc.com)